

## 1 Dual Switch Push Plate


This 4.5" square push plate designed to fit neatly into standard single- or double-gang electrical boxes. The face plates are made of 1/16" thick stainless steel for durable use. The push plate may be hard wired to the door operator or connected to one of Hager Companies' line of radio-controlled transmitters.

## 2 Related Optional Accessory

RADIO CONTROLLED TRANSMITTER AND RECIEVERS: Wide range of analog and digital transmitters and receivers.

## 3 Installation Instructions

1. Remove the two Phillips head screws from the face plate of the push plate.
2. Wire the switches of the push plates to the door controllers or radio-controlled transmitters using the NC contacts and common.
3. Fasten the disassembled push plate to the single- or double-gang electrical box (by others) using the enclosed #6 screws.
4. Reattach the face plate to the mounted backplate assembly.
5. Test the push plate for proper activation.

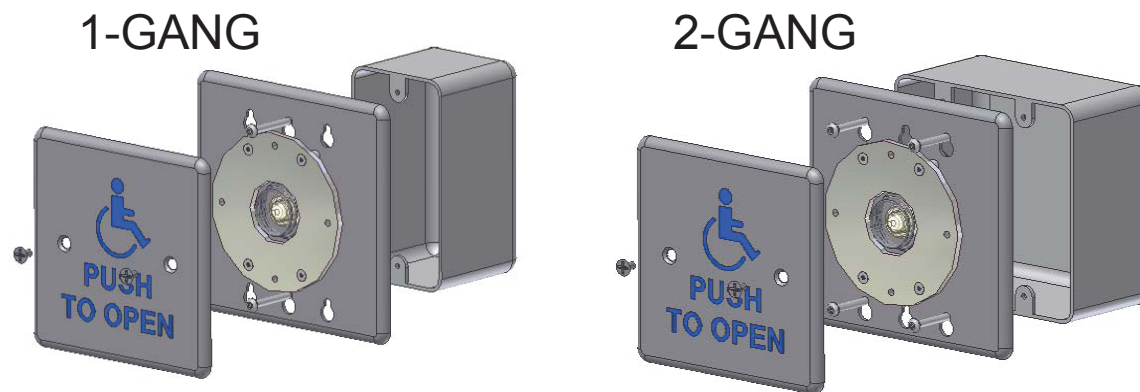

## 4 Push Plate Cleaning

The push plates are constructed with durable stainless steel and painted with scuff-resistant coatings. To clean the plates, use only a damp, non-abrasive cloth. Repeated cleaning with harsh solvents or abrasive materials may cause deterioration of the coating. Please make the end-user aware of this procedure.