

# 1. Install Track & Rollers


Track should be installed to leave a gap at one end for easy insertion of the rollers:

1" (25.4mm) gap for 7/8" (22.23mm) wheels

1-1/2" (38.1mm) gap for 1-1/4" (31.75mm) wheels

If track is installed with no gap, rollers must be inserted before track is mounted.


# 2. Mount Door Plates

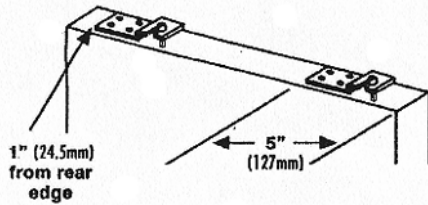

Note: Plates may be off center for 1-3/4" (44.45mm) doors. See chart on back.



# 3. Hang and Adjust Door:

Attach door to rollers. Turn adjusting bolt for height and plumb adjustments. Tighten hanger jam nut securely.

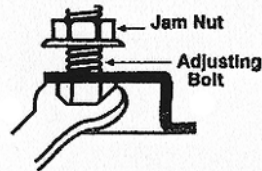

# 4. Install Door Guide, Stops and Pulls

Two Door Installation with Door Stop

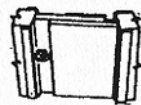

CLOSET DOOR HARDWARE  
HAGER HINGE CO. St. Louis, MO 63104 U.S.A.  
(314) 772-4400

FORM #8493-H  
Rev. 5/25/99

# INSTALLATION INSTRUCTIONS

	1-3/8" (34.93mm) THICK DOORS	1-3/4" (44.45mm) THICK DOORS
9601	<b>Two tracks with 7/8" (22.22mm) Wheels</b> 	<b>Two tracks with 7/8" (22.22mm) Wheels</b> 
9602	<b>Double track with 7/8" (22.22mm) Wheels</b> 	<b>Double track with 7/8" (22.22mm) Wheels</b> 
9603	<b>Double Fascia Track with 7/8" (22.22mm) Wheels</b> 	<b>Double Fascia Track with 7/8" (22.22mm) Wheels</b> 
9604	<b>Two tracks with 1-1/4" (31.75mm) Wheels</b> 	<b>Two tracks with 1-1/4" (31.75mm) Wheels</b> 
9605	<b>Double Fascia Track with 1-1/4" (31.75mm) Wheels</b> 	<b>Double Fascia Track with 1-1/4" (31.75mm) Wheels</b> 

FLOOR CLEARANCE: Allow 1/2" (12.7mm) between door and finished floor.